

INSTALLATION INSTRUCTIONS

UBT8/NUBT8 88000-LED SERIES - T8 U-BEND (Single Pole) (Operate on 120-277 VAC)

REMOVING EXISTING BALLAST

A.) DISCONNECT POWER TO FIXTURE

- B.) Remove existing fluorescent tubes and properly recycle.
- C.) Locate the existing ballast inside the fixture
- D.) Cut existing wires from ballast to fixture and ballast to power. (Cut wires near ballast to ensure proper length).
- E.) Remove ballast and properly recycle.

INSTALLING LED LAMPS (see wiring diagram on Pg. 2)

- A.) Reconnect existing wires directly to the power source.
- B.) Reassemble ballast cover.
- C.) Insert Neptun LED U-Bend T8 Lamps into exising sockets.
- D.) Resupply power to fixture.









3. Install LED Tube



NOTE:

Neptun LED Tubes are suitable for non-shunted Rapid Start Sockets

VS.



NON-SHUNTED



SHUNTED W/JUMPER

NEPTUN Light, Inc. Questions and Comments: service@neptunlight.com Toll-Free: 1-888-735-8330

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE.
INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND
LICENSED ELECTRICIAN OR TECHNICIAN.




ELECTRONIC BALLAST


INSTALLATION INSTRUCTIONS

UBT8/NUBT8 88000-LED SERIES - T8 U-BEND (Single Pole) (Operate on 120-277 VAC)

Wiring Diagram: Rapid Start - 1 Lamp System

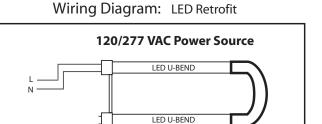


Wiring Diagram: Rapid Start - 2 Lamp System

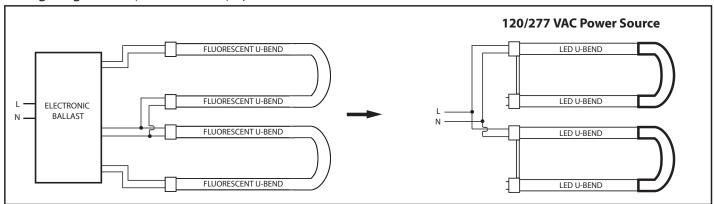


Wiring Diagram: Instant Start - 1 Lamp System w/ Shunted or Jumper Tombstone

FLUORESCENT U-BEND

FLUORESCENT U-BEND

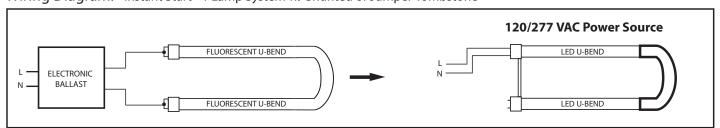

Wiring Diagram: Instant Start - 1 Lamp System w/ Shunted or Jumper Tombstone

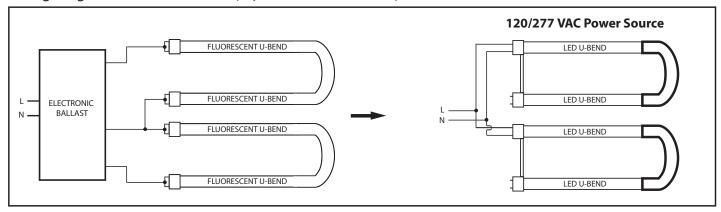

NEPTUN Light, Inc. Questions and Comments: service@neptunlight.com Toll-Free: 1-888-735-8330

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE.
INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND
LICENSED ELECTRICIAN OR TECHNICIAN.