

INSTALLATION INSTRUCTIONS

88000-LED SERIES - T8 TUBES (Single Pole) (Operate on 120-277 VAC)


REMOVING EXISTING BALLAST


A.) DISCONNECT POWER TO FIXTURE

 
- B.) Remove existing fluorescent tubes and properly recycle.
- C.) Locate the existing ballast inside the fixture
- D.) Cut existing wires from ballast to fixture and ballast to power. (Cut wires near ballast to ensure proper length).
- E.) Remove ballast and properly recycle.

INSTALLING LED LAMPS (see wiring diagram on Pg. 2)

- A.) Reconnect existing wires directly to the power source.
- B.) Reassemble ballast cover.
- C.) Insert Neptun LED T8 Lamps into exising sockets.
- D.) Resupply power to fixture.

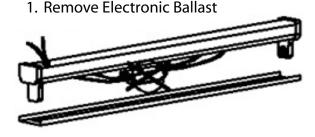

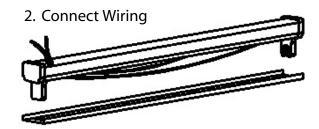



NOTE:

Neptun LED Tubes are suitable for non-shunted Rapid Start Sockets

VS.



NON-SHUNTED



SHUNTED

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE. INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND LICENSED ELECTRICIAN OR TECHNICIAN.

Toll-Free: 1-888-735-8330 © Copyright 2012

service@neptunlight.com

NEPTUN Light, Inc. Questions and Comments:

© Copyright 2012 NEPTUN Light, Inc.




INSTALLATION INSTRUCTIONS

88000-LED SERIES - T8 TUBES (Single Pole) (Operate on 120-277 VAC)


Wiring Diagram: U.S. Instant Start 2 Lamp System



Wiring Diagram: U.S. Instant Start 3 Lamp System

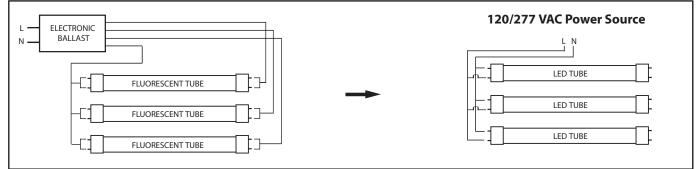

Wiring Diagram: U.S. Instant Start 4 Lamp System

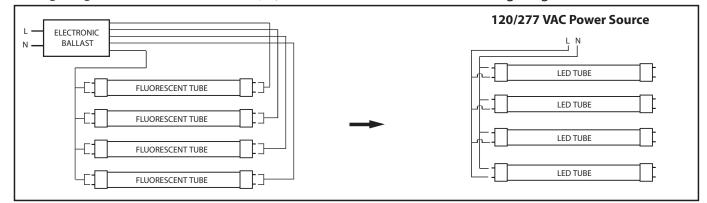

NEPTUN Light, Inc. Questions and Comments: service@neptunlight.com Toll-Free: 1-888-735-8330

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE. INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND LICENSED ELECTRICIAN OR TECHNICIAN.

© Copyright 2012 NEPTUN Light, Inc. Wiring Diagram: LED Retrofit

Wiring Diagram: LED Retrofit

Wiring Diagram: LED Retrofit